



## Vigilant QE90 Emergency Warning and Intercommunication System – EWIS

*The Vigilant QE90 Emergency Warning and Intercommunication System (EWIS) is designed to facilitate the orderly evacuation of a building in the event of an emergency. The evacuation may be initiated automatically by a fire alarm system, or by a building occupant operating an emergency call point. Integrating a flexible alarm and voice warning system with a dedicated emergency intercom system, the QE90 allows fire wardens or emergency services personnel to easily control and coordinate rapid building evacuation.*

*QE90 meets the control and indicating equipment requirements of installation standard AS 1670.4, complies with equipment standard AS 2220.1, and supports the ISO 8201 T3 evacuation signal and strobe pattern.*

### Emergency Warning System

The QE90 Emergency Warning System (EWS) generates and controls audible warning signals via dedicated amplifiers and loudspeakers covering each level, or zone, of a building. Supplementary visual warning devices can also be connected (strobes in high-noise areas, for example). Alarm inputs come either from a fire alarm system or emergency call points (manual break-glass alarms) located throughout the premises. On detection

of an alarm, the QE90 generates an evacuation signal interspersed with a digitised voice message instructing occupants to evacuate the building. QE90 supports either the ISO 8201 T3 evacuation signal as specified in AS 1670.4, or the AS 2220 signal. Alert signals and alert voice messages may also be programmed to provide a lower level warning if required.

For high-rise and other special types of buildings, the QE90 provides an automatic evacuation cascade sequence to enable areas in immediate danger

to evacuate first. Evacuation signals automatically escalate at predetermined time intervals, until the whole building is evacuated in an orderly manner.

Authorised fire wardens or fire-fighting personnel may take manual control of the system. An emergency public address microphone allows the broadcast of verbal instructions to building occupants in all, or selected areas. Under non-emergency conditions the QE90 can also be used to distribute background music (BGM) and routine public address announcements.

## Emergency Intercommunication System

The QE90 Emergency Intercommunication System (EIS) provides dedicated emergency telephone communications between the Emergency Control Panel (ECP) and fire Warden Intercommunication Points (WIPs) in each zone.

## Secondary ECPs

Secondary Emergency Control Panels (SECPs) may be connected to allow control and monitoring of the QE90 system from multiple locations. Each SECP duplicates all the functions of the Master ECP (MECP) and a priority system arbitrates hand-over of control between Master and SECPs.

## Networked Systems

Networked QE90 systems extend the concept of secondary ECPs to enable multiple ECPs and/or equipment racks to be interconnected throughout a large building complex or site. A standard SECP simply repeats all of the functions of its associated MECP, but networked ECPs may control the total system or a subset of it.

Programmed mapping enables zone controls of one ECP to control zones on another. Each ECP or equipment rack retains local control of its own facilities (amplifiers, WIPs etc.) and can continue to operate locally without depending on network communications (provided local controls and/or fire alarm inputs are available).

## Easy to Operate

Operation is simple with the QE90's discrete membrane keypad. Its ergonomically-designed vertical format aids user perception and operation. Individual one-touch keys select each different function uniquely for each zone.

High reliability light-emitting diode indicators show current system status at a glance. Separate "Group" and "All Zone" keys allow rapid selection of multiple zones. Audible and visual confirmation of keystrokes provide added operator confidence. A front panel keyswitch selects the ECP operation mode (Automatic, Manual, Isolate).

## Control Panel Facilities

- Automatic/ Manual/ Isolate mode selection keyswitch.
- Individual zone selection of:
  - Alert
  - Evacuate.
  - PA Speech
- Individual WIP handset selection.
- Individual zone reminder indicators/ keys:
  - Zone Manned
  - Zone Cleared.
- All zone selection of:
  - Alert
  - Evacuate
  - PA Speech
  - WIP Handset
  - Zone Manned
  - Zone Cleared.
- Group selection of:
  - Alert
  - Evacuate.
  - PA Speech
- Lamp Test.
- Programming:
  - Time delays
  - Key groups


- BGM select
- Fault recall
- Mains/ Charger Fault indicators.
- Fault and input status indicators.
- System fault audible alarm silence.
- Emergency PA microphone.
- Master WIP handset.
- Panel illumination lamp (optional).
- Zone isolate
- Cascade enable.

## Flexible Configuration

- Choice of 10, 25, 50, 100 or 200 Watt RMS power amplifier modules. Multiple amplifiers may be allocated to individual zones for greater power.
- Selection of ISO 8201 or AS 2220 evacuate signal.
- Background music (BGM), local and non-emergency paging may be directed to selected areas.
- Areas covered by non-emergency paging do not need to correspond to evacuation zones.
- Emergency alarms and public address automatically override non-emergency features.
- Up to 3 (or more) discrete WIP locations available per zone.
- MECP control console may be located remotely from main equipment rack.
- Multiple SECPs (and MECPs for networked systems) may be remotely located. The entire system (or selected parts of it) can be controlled from any location as determined by system programming.
- Customised cascade sequences available to suit individual applications.
- Distributed amplifier systems available for very large or high-rise applications.
- Modular construction allows simple system extension or upgrade at a later date.

## Other Features and Options

- Special digitised voice messages are available:
  - Voice message on Alert in addition to Evacuate.
  - Voice messages in multiple languages.
  - Continuous or once only messages instead of Alert and/ or Evacuate tones.
  - Messages programmed to announce information according to specific conditions eg. advise building occupants of the appropriate

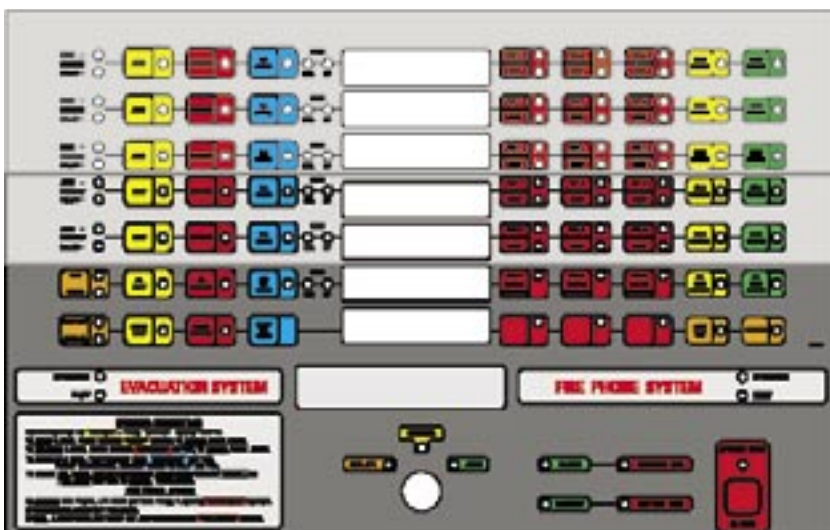

Control Panel Layout



- Programmable relay outputs eg.
  - Evac fault                    - Any alarm
  - Fault or alarm               - BGM override
  - Auto/ Man/ Isol.           - WIP fault
  - WIP handset off-hook.
- Emergency control panel lighting.
- Special cascade sequences.
- Automatic test sequence.
- Warden zones to alert wardens of alarm in another area.
- Monitor zones to repeat the highest priority signal that other nominated zones are receiving.
- After-hours timer input to override cascade.
- Custom digitised voice messages (multiple languages available).
- Stand-by amplifier(s) with automatic changeover.
- Distributed amplifier system.
- Inter-ECP WIP calls (for systems with more than one ECP).
- Remote WIPs via derived circuits (eg. fibre optics, radio).
- WIP calls redirected to PABX, radio, or other WIP.
- Remote WIP control panel.
- Individual zone BGM inputs.
- Remote BGM control panel.
- Paging console programmable to also perform WIP control and BGM control functions.
- PC-based paging console.
- Paging chimes.
- PABX paging interface.
- Local zone non-emergency paging.
- Event-logging printer.
- High-level data links.
- Networking.
- Computer colour graphics SECP.

## Specifications

### Basic system configurations

Panel size:	18U	21U	28U	40U	Double 28U	Double 40U
Height(mm)	885	1050	1330	1865	1330	1865
Width(mm)	575	575	575	575	1150	1150
MECP Depth (mm)	380	350	380	380	–	380
SECP Depth (mm)	205	–	205	205	205	–
Maximum number of zones with:						
10W RMS Amps	8	20	20	40	–	80
25W RMS Amps	4	10	10	20	–	40
50W RMS Amps	4	10	10	20	–	40
100W RMS Amps	2	5	5	10	–	20
200W RMS Amps	2	2	2	4	–	8
Amplifier configurations can be mixed	10, 25, 50, 100, 200 Watt.					
Speaker Line Voltage	100V RMS at rated power output					
WIP Zones(max)	10	18	20	42	–	90
SECP Zones	1–18	–	19–34	35–42	43–74	75–90
Other configurations or larger systems available on request.						
Cabinet Material:	1.6mm mild steel					
Cabinet Finish:	Baked epoxy					
Colour:	Cream Wrinkle BFF998CW (special colours available on request)					
Temperature:	–5 °C to 45 °C operating					
Humidity:	up to 95% RH (non-condensing)					
Power Supply:	230VAC +10% – 11%, 50Hz.					

## Site-Programmable Facilities:

- Time delays:
  - Alarm to Alert delay
  - Alert to Evacuate delay
  - Cascade step interval.
- Alert/ Evacuate/ PA groups.
- Background music zone selection.
- Individual zone isolation.
- Cascade enable/ disable.
- Service fault history recall/ clear.
- Redirection of Master WIP handset to field WIP handset (if option provided).
- Operation of non-emergency Paging Console to perform WIP, BGM and general indication functions.

## Factory-Programmable Facilities:

- System configuration.
- Control relay outputs.
- Special cascade sequences.
- Warden zones.
- FIP/ emergency call point input to zone mapping.
- Special digitised voice messages.
- Other options (refer Optional Extra Facilities).

## Approved

The QE90 system is approved to Australian Standard AS 2220.1 – 1989: "Emergency Warning and Intercommunication Systems in Buildings".

SSL Certificate of Compliance No. 181  
CSIRO ActivFire Listing No. afp-1423  
FPANZ Listing No VF/406



tel: 1300 552 559  
simplexfire.au@tycoint.com  
www.simplexfire.com.au

Tyco reserve the right to alter specifications without notice in line with their policy of continuous product improvement.

A **tyco** COMPANY