

QE90 Emergency Warning and Intercommunication System - EWIS

The Vigilant QE90 Emergency Warning and Intercommunication System (EWIS) is designed to facilitate the orderly evacuation of a building in the event of an emergency. This may be initiated automatically by a fire alarm system, or by a building occupant operating an emergency break-glass alarm. Integrating a flexible alarm and voice warning system with a dedicated emergency telephone network, the QE90 allows fire wardens or emergency services personnel to easily control and coordinate rapid building evacuation.

Emergency Warning System

The QE90 Emergency Warning System (EWS) generates and controls audible warning signals via dedicated amplifiers and loudspeakers covering each level, or zone, of a building. Supplementary visual warning lights can also be connected (e.g. strobes for high-noise areas). Alarm inputs come either from a fire alarm system or manual break-glass alarms located throughout the premises. On detection of an alarm, the QE90 generates the standard warden "Alert" tone. After a pre-determined period the system switches automatically to the "Evacuate" tone interspersed with a digitised voice message which instructs occupants to evacuate the building.

For high-rise and other special types of buildings, the QE90 provides an automatic evacuation cascade sequence whereby areas in immediate danger are evacuated first. Alert and Evacuate warning tones automatically escalate at pre-determined time intervals, until the whole building is evacuated in an orderly manner.

At any time authorised fire wardens or fire-fighting personnel may take manual control of the QE90 system. An emergency public address microphone allows the broadcast of verbal messages to building occupants in all, or selected areas via the zone loudspeakers. Under non-emergency conditions the QE90 can be used to distribute background music (BGM) and routine public address announcements.

Emergency Intercommunication System

The QE90 Emergency Intercommunication System (EIS) provides dedicated emergency telephone communications between the Emergency Control Panel (ECP) and fire Warden Intercommunication Points (WIPs) in each zone.

Secondary ECPs

Secondary Emergency Control Panels (SECPs) may be connected to allow control and monitoring of the QE90 system from multiple locations. Each SECP duplicates all the functions of the Master ECP and a priority system arbitrates hand-over of control between Master and SECPs.

Networked Systems

Networked QE90 systems extend the concept of secondary ECPs to enable multiple ECPs and/ or equipment racks to be interconnected throughout a large building complex or site. A standard SECP simply repeats all of the functions of its associated MECP, but networked ECPs may control the total system or a subset of it. Programmed mapping enables zone controls of one ECP to control zones on another. Each ECP or equipment rack retains local control of its own facilities (amplifiers, WIPs etc.) and can continue to operate locally without depending on network communications (provided local controls and/ or fire alarm inputs are available).



Easy to Operate

Operation is simple with the QE90's discrete membrane keypad. Its ergonomically-designed vertical format aids user perception and operation. Individual one-touch keys select each different function uniquely for each zone. High reliability light-emitting diode indicators show current system status at a glance. Separate "Group" and "All Zone" keys allow rapid selection of multiple zones. Audible and visual confirmation of keystrokes provide added operator confidence. A front panel keyswitch selects the ECP operation mode (Automatic, Manual, Isolate).

Control Panel Facilities

- Automatic/ Manual/ Isolate mode selection keyswitch.
- Individual zone selection of:
 - Alert - PA Speech
 - Evacuate.
- Individual WIP fire phone selection.
- Individual zone reminder indicators/ keys:
 - Zone Manned - Zone Cleared.
- All zone selection of:
 - Alert - WIP Fire Phone
 - Evacuate - Zone Manned
 - PA Speech - Zone Cleared.
- Group selection of:
 - Alert - PA Speech
 - Evacuate.
- Lamp Test.
- Programming:
 - Time delays - Key groups
 - BGM select - Zone isolate
 - Fault recall - Cascade enable.
- Mains/ Charger Fault indicators.
- Fault and input status indicators.
- System fault audible alarm silence.
- Emergency PA microphone.
- Master WIP handset.
- Panel illumination lamp (optional).

Flexible Configuration


- Choice of 10, 25, 50, 100 or 200 Watt RMS power amplifier modules. Multiple amplifiers may be allocated to individual zones for greater power.
- Background music (BGM), local and non-emergency paging may be directed to selected areas.
- Areas covered by non-emergency paging do not need to correspond to evacuation zones.
- Emergency alarms and public address automatically override non-emergency features.
- Up to 3 (or more) discrete WIP locations available per zone.
- MECP control console may be located remotely from main equipment rack.
- Multiple SECPs (and MECPs for networked systems) may be remotely located. The entire system (or selected parts of it) can be controlled from any location as determined by system programming.
- Customised cascade sequences available to suit individual applications.
- Distributed amplifier systems available for very large or high-rise applications.
- Modular construction allows simple system extension or upgrade at a later date.

Other Features and Options

- Special digitised voice messages are available:
 - Voice message on Alert in addition to Evacuate.
 - Voice messages in multiple languages.
 - Continuous or once only messages instead of Alert and/ or Evacuate tones.


- Messages programmed to announce information according to specific conditions e.g. advise building occupants of the appropriate evacuation route to take or inform staff about the source of an alarm.
- Non-emergency messages (e.g. class or shift change, tea break) programmed to play to certain areas under the control of external inputs (e.g. timeclock).
- Warden zones (follow initial alarm zone).
- After-hours timer input option to override cascade.
- Automatic zone-manned indication from switches on WIP lines.
- Three wire WIP/ BGA connection.
- Redirection of Master WIP to field WIP
- Optional chime before non-emergency paging announcement.
- Control relay outputs (factory programmed logic).
- BGM override output for each amplifier - fail-safe control that overrides local volume controls to give full amplifier power for emergency warnings.
- Optional stand-by amplifier(s) with automatic change-over in the event of a zone amplifier fault.
- Optional event-logging printer.
- Optional automatic test sequence automatically plays a pre-programmed sequence of messages and tones to test the system, while keeping the building occupants informed about the test as it progresses.
- Special interfaces (e.g. Colour graphics, fibre optics, High-level link to FIP, Modbus BMS interface).

CONTROL PANEL LAYOUT - (3 WIPS PER ZONE)

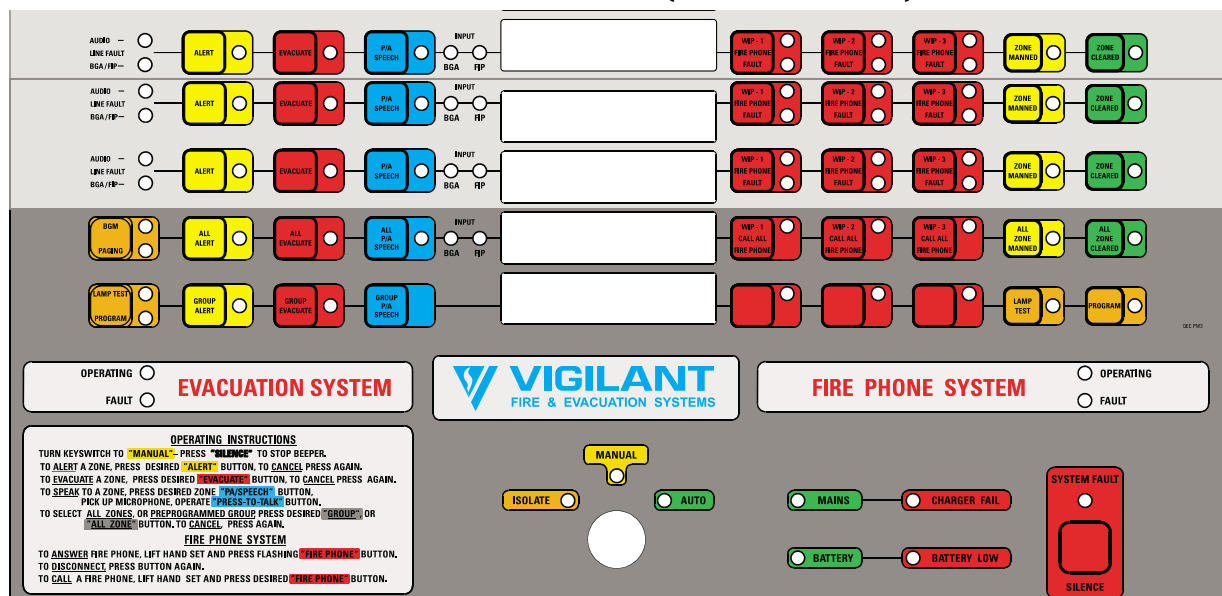

OPERATING INSTRUCTIONS
 TURN KEYSWITCH TO "MANUAL". PRESS "SILENCE" TO STOP BEEPER.
 TO ALERT A ZONE, PRESS DESIRED "ALERT" BUTTON. TO CANCEL PRESS AGAIN.
 TO EVACUATE A ZONE, PRESS DESIRED "EVACUATE" BUTTON. TO CANCEL PRESS AGAIN.
 TO SPEAK TO A ZONE, PRESS DESIRED "PA/SPEECH" BUTTON.
 PICK UP MICROPHONE, OPERATE "PRESS-TO-TALK" BUTTON.
 TO SELECT ALL ZONES, OR PREPROGRAMMED GROUP PRESS DESIRED "GROUP" OR "ALL ZONE" BUTTON. TO CANCEL, PRESS AGAIN.
FIRE PHONE SYSTEM
 TO ANSWER FIRE PHONE, LIFT HAND SET AND PRESS FLASHING "FIRE PHONE" BUTTON.
 TO DISCONNECT, PRESS BUTTON AGAIN.
 TO CALL A FIRE PHONE, LIFT HAND SET AND PRESS DESIRED "FIRE PHONE" BUTTON.

QE90 - Emergency Warning and Intercommunication System - EWIS

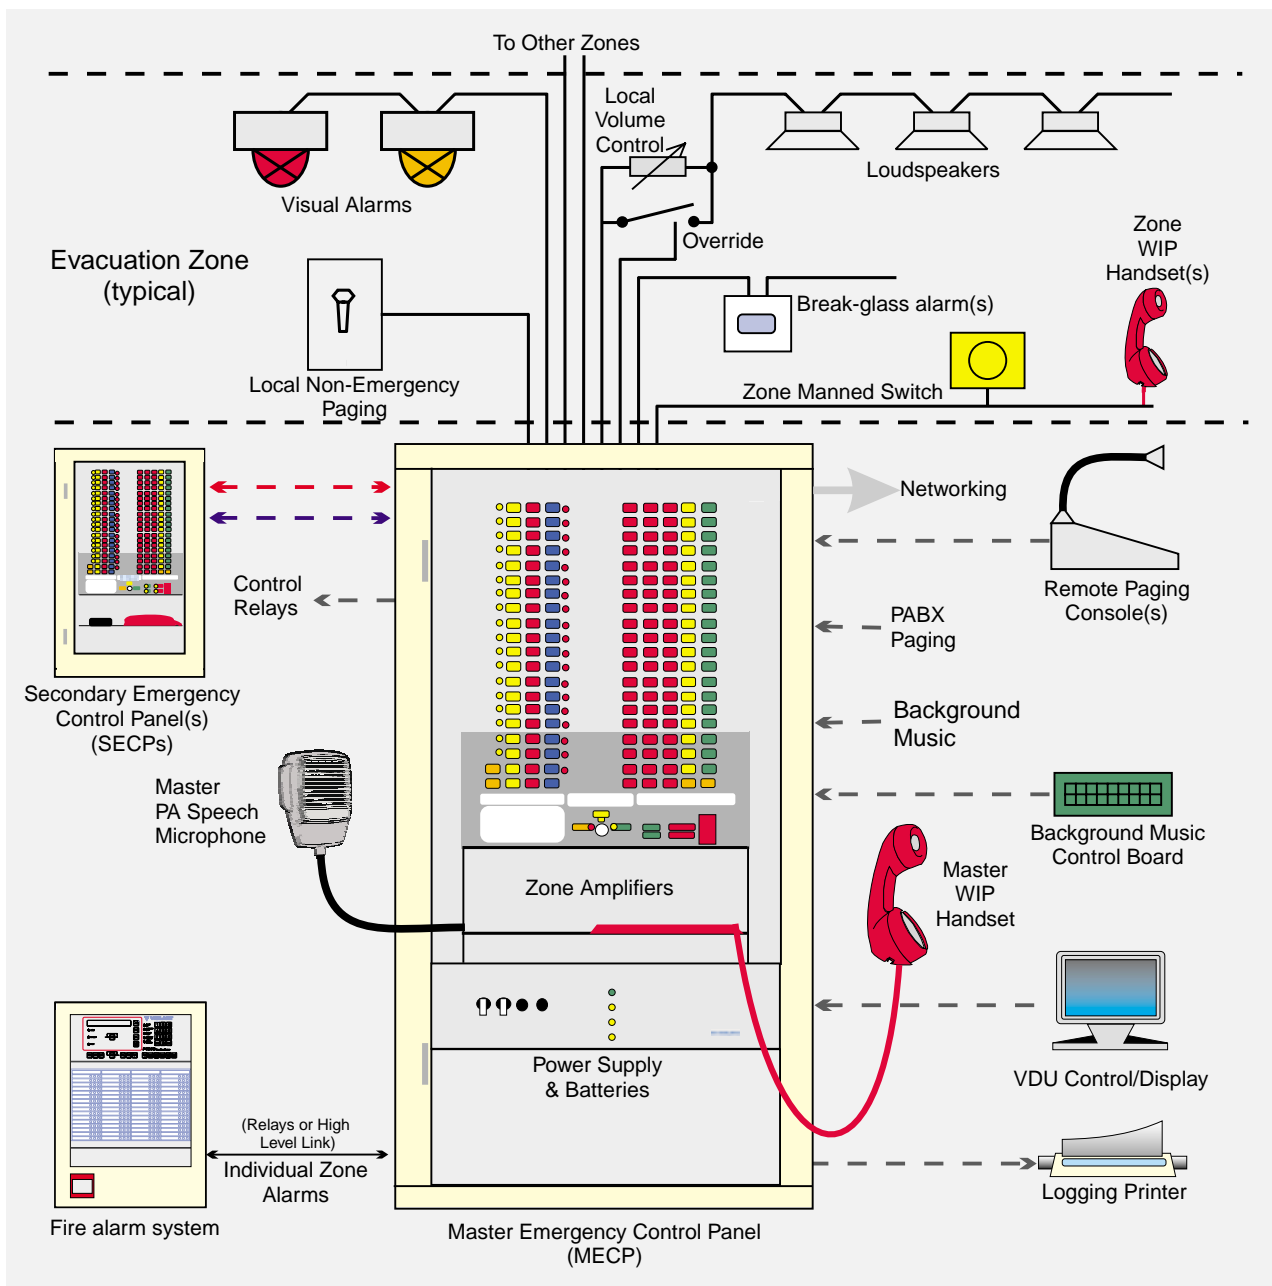

QE90 EWIS SYSTEM - TYPICAL CONFIGURATION

Reliable

- The QE90 system is fully monitored for faults:
 - Speaker line faults
 - Fire alarm system input line faults
 - Manual (Break-glass) alarm line faults
 - Visual alarm line faults
 - SECP communication line faults
 - WIP handset line faults
 - Internal communication line faults
 - Amplifier failure
 - Power supply failure/ fault
 - Microprocessor failure.
- The system is fault-tolerant. Failure of an amplifier, or a fault on one line (e.g. speaker, WIP, visual alarm) does not affect operation of any other zones.

- ECPs on a networked system can continue standalone operation in response to local FIP inputs and/ or controls (if present) without dependence on network communications.
- Optional stand-by amplifier(s) provide automatic changeover in the event of a zone amplifier fault.
- Multiple tone generators (optional for smaller systems).
- The system has its own battery supply and is not reliant on building mains supply, which often fails during an emergency.
- Duplicated communications link between MECP and SECP(s) and between networked ECP(s)

- provides reliable transmission of audio signals and data.
- Modular construction facilitates rapid fault diagnosis and system repair.

APPROVED

The QE90 microprocessor-based system is approved to Australian Standard AS 2220.1 - 1989: "Emergency Warning and Intercommunication Systems in Buildings". SSL Certificate of Compliance No. 181. SSL Listing No. 524.

QE90 - Emergency Warning and Intercommunication System - EWIS

Basic System Comprises:

- Master Emergency Control Panel (MECP) complete with full control facilities for both Emergency Warning and Emergency Intercommunication Systems.
- Individual amplifier(s) per zone.
- Alert/ Evacuate tones with automatic digitised voice message.
- Emergency public address.
- Standard automatic alarm cascade sequence.
- 1 or 3 WIP circuits per zone.
- Full monitoring (speaker/ WIP lines etc.) with visual indications and sounder.
- Fire alarm inputs (one per zone).
- Master background music (BGM) input.
- One BGM override output per amplifier.
- Integral 24 Volt battery charger.
- Storage for stand-by batteries.

Optional Extra Facilities:

- More than 3 WIP circuits per zone.
- Secondary Emergency Control Panel(s).
- Remote amplifier racks.
- Multiple FIP/ Break-glass inputs per zone.
- Break-glass alarm inputs.
- 3-wire WIP/ BGA inputs.
- Strobe (visual) alarm outputs.
- Programmable relay outputs e.g.
 - Evac fault
 - Any alarm
 - Fault or alarm
 - BGM override
 - Auto/ Man/ Isol.
 - WIP off-hook
 - WIP fault.
- Emergency control panel lighting.
- Special cascade sequences.
- Automatic test sequence.
- Warden zones to alert wardens of alarm in another area.
- Monitor zones to repeat the highest priority signal that other nominated zones are receiving.
- After-hours timer input to override cascade.

Specifications

Basic system configurations

Panel size:	18U	21U	28U	40U	Double 28U	Double 40U
Height(mm)	885	1050	1330	1865	1330	1865
Width(mm)	575	575	575	575	1150	1150
MECP Depth (mm)	380	350	380	380	-	380
SECP Depth (mm)	205	-	205	205	205	-

Maximum number of zones with:

10W RMS Amps	10	18	20	40	-	80
25W RMS Amps	6	10	10	20	-	40
50W RMS Amps	4	10	10	20	-	40
100W RMS Amps	2	5	5	10	-	20
200W RMS Amps	1	2	2	4	-	8

Amplifier configurations can be mixed 10, 25, 50, 100, 200 Watt.

WIP Zones(max)	10	18	20	42	-	90
SECP Zones	1-18	-	19-34	35-42	43-74	75-90

Other configurations or larger systems available on request.

Cabinet Material: 1.6mm mild steel

Cabinet Finish: Baked epoxy

Colour: Cream Wrinkle BFF998CW
(special colours available on request)

Temperature: -5 °C to 45 °C operating

Humidity: up to 95% RH (non-condensing)

Power Supply: 240VAC +6% -10%, 50Hz.

- Custom digitised voice messages (multiple languages available).
- Stand-by amplifier(s) with automatic changeover.
- Distributed amplifier system.
- Inter-ECP WIP calls (for systems with more than one ECP).
- Remote WIP phones via derived circuits (e.g. fibre optics, radio).
- WIP calls redirected to PABX, radio, or other WIP
- Remote WIP control panel.
- Individual zone BGM inputs.
- Remote BGM control panel.
- Paging console programmable to also perform WIP control and BGM control functions.
- Paging chimes.
- PABX paging interface.
- Local zone non-emergency paging.
- Event-logging printer.
- High-level data links.
- Networking.
- Computer colour graphics SECP.

Site-Programmable Facilities:

- Time delays:
 - Initial alarm delay
 - Alert to Evacuate delay
 - Cascade step interval.
- Alert/ Evacuate/ PA groups.
- Background music zone selection.
- Individual zone isolation.
- Cascade enable/ disable.
- Service fault history recall/ clear.
- Redirection of Master WIP to field WIP (if option provided).
- Operation of non-emergency Paging Console to perform WIP, BGM and general indication functions.

Factory-Programmable Facilities:

- System configuration.
- Control relay outputs.
- Special cascade sequences.
- Warden zones.
- FIP/ Break-glass input to zone mapping.
- Special digitised voice messages.
- Other options (refer Optional Extra Facilities).

The Vigilant QE90 is a product of Vigilant Fire & Evacuation Systems.

tyco

Fire & Security

Vigilant reserves the right to institute changes in materials, design and specifications without notice in keeping with Vigilant's policy of continuing product improvement. Vigilant Fire and Evacuation Systems is a division of Tyco New Zealand Limited.