

**Features**

TrueAlarm® analog sensing provides digital transmission of analog sensor values via MAPNET II® or IDNet™, two-wire communications\*\*

**Fire alarm control panel provides:**

- Individual sensitivity selection for each sensor
- Sensitivity monitoring that satisfies NFPA 72 sensitivity testing requirements
- Peak value logging allowing accurate analysis for sensitivity selection
- Automatic, once per minute individual sensor calibration check that verifies sensor integrity
- Automatic environmental compensation
- Display of sensitivity directly in percent per foot
- Multi-stage alarm operation
- Ability to display and print detailed sensor information in plain English language

**Photoelectric smoke sensors:**

- Seven levels of sensitivity from 0.2% to 3.7%

**Heat sensors:**

- Fixed temperature sensing
- Rate-of-rise temperature sensing
- Utility temperature sensing

**Ionization smoke sensors\*:**


- Three levels of sensitivity; 0.5%, 0.9% and 1.3%

**For use with Simplex®:**

- 4010, 4020, 4100, and 4120 Series control panels
- Universal Transponders and 2120 TrueAlarm CDTs equipped for MAPNET II operation

**Magnetic test feature****Functional and architecturally styled chamber enclosure:**

- Louvered design enhances smoke capture by directing flow to chamber
- Entrance areas are minimally visible when ceiling mounted

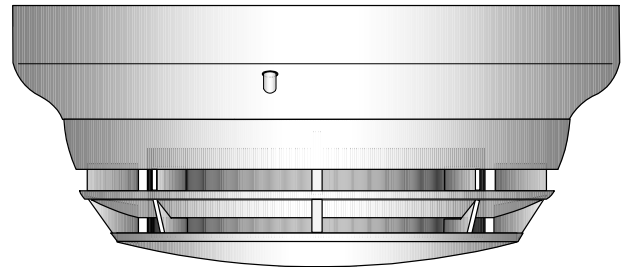**Optional accessories include remote LED alarm indicator and output relays****UL listed to Standard 268**

4098-9714 TrueAlarm Photoelectric  
Sensor Mounted in Base

**Description****Digital Communication of Analog Sensing.**

TrueAlarm analog sensors provide an analog measurement that is digitally communicated to the host control panel using Simplex addressable communications. At the control panel, the data is analyzed and an average value is determined and stored. An alarm or other abnormal condition is determined by comparing the sensor's present value against its average value and time.

**Intelligent Data Evaluation.** Monitoring each sensor's average value provides a continuously shifting reference point. This software filtering process compensates for environmental factors (dust, dirt, etc.) and component aging, providing an accurate reference for evaluating new activity. With this filtering, there is a significant reduction in the probability of false or nuisance alarms caused by shifts in sensitivity, either up or down.

**Control Panel Selection.** Peak activity per sensor is stored to assist in evaluating specific locations. The alarm set point for each TrueAlarm sensor is determined at the host control panel, selectable as more or less sensitive as the individual application requires.

**Timed/Multi-Stage Selection.** Sensor alarm set points can be programmed for timed automatic sensitivity selection (such as more sensitive at night, less sensitive during day). Control panel programming can also provide multi-stage operation per sensor. For example, a 0.2% level may cause a warning to prompt investigation while a 2.5% level may initiate an alarm.

**Sensor Alarm and Trouble LED Indication.** Each sensor base's LED pulses to indicate communications with the panel. If the control panel determines that a sensor is in alarm, or that it is dirty or has some other type of trouble, the details are annunciated at the control panel and that sensor base's LED will be turned on steadily. During a system alarm, the control panel will control the LEDs such that an LED indicating a trouble will return to pulsing to help identify the alarmed sensors.

\*\* TrueAlarm analog sensors and MAPNET II and IDNet communications are protected by one or more of the following U.S. Patents: 5,155,468; 5,173,683; 5,543,777; 5,400,014; 5,552,765; 5,552,763; 4,796,025; DES. 377,460.

\* These products have been approved by the California State Fire Marshal (CSFM) pursuant to Section 13144.1 of the California Health and Safety Code. See CSFM Listings 7272-0026:218, 7271-0026:231, 7270-0026:216, and 7300-0026:217 for allowable values and/or conditions concerning material presented in this document. It is subject to re-examination, revision, and possible cancellation. Accepted for use – City of New York Department of Buildings – MEA35-93E. Refer to page 4 for ULC listing status. Additional listings may be applicable, contact your local Simplex product supplier for the latest status.

# TrueAlarm Sensor Bases and Accessories

## Sensor Base Features

### Base mounted address selection:

- Address remains with its programmed location
- Accessible from front (dipswitch under sensor)

### Automatic identification provides default sensitivity when substituting sensor types

### Integral red LED for power-on (pulsing), or alarm or trouble (steady on)

### Locking anti-tamper design

### Magnetically operated functional test

### Mounts on standard outlet box

## Sensor Bases

### 4098-9792, Standard sensor base

### 4098-9789, Sensor base with wired connections for:

- 2098-9808 Remote LED alarm indicator or 4098-9822 relay (unsupervised)

### 4098-9791, Sensor base with supervised relay driver output (not compatible with 2120 CDT):

- Relay operation is programmable and can be manually operated from control panel
- Use with remote mount 2098-9737 relay
- Also includes wired connections for remote LED alarm indicator or 4098-9822 relay

## Sensor Base Options

### 2098-9737, Remote or local mount supervised relay:

- DPDT contacts for resistive/suppressed loads, power limited rating of 3 A @ 28 VDC; non-power limited rating of 3 A @ 120 VAC (requires external 24 VDC coil power)

### 4098-9822, LED Annunciation Relay:

- Activates when base LED is on steady, indicating local alarm or trouble
- DPDT contacts for resistive/suppressed loads, power limited rating of 2 A @ 28 VDC; non-power limited rating of 1/2 A @ 120 VAC, (requires external 24 VDC coil power)

### 4098-9832, Adapter plate:

- Required for surface or semi-flush mounting to 4" square electrical box and for surface mounting to 4" octagonal box
- Can be used for cosmetic retrofitting to existing 6-3/8" diameter base product

### 2098-9808, Remote red LED Alarm Indicator:

- Mounts on single gang box (shown in illustration to right)



## Description

TrueAlarm sensor bases contain integral addressable electronics that constantly monitor the status of the detachable photoelectric, ionization, or heat sensors. Each sensor's output is digitized and transmitted to the system fire alarm control panel every four seconds.


Since TrueAlarm sensors use the same base, different sensor types can be easily interchanged to meet specific location requirements. This feature also allows intentional sensor substitution during building construction. When conditions are temporarily dusty, instead of covering the smoke sensors (causing them to be disabled), heat sensors may be installed without reprogramming the control panel. Although the control panel will indicate an incorrect sensor type, the heat sensor will operate at a default sensitivity providing heat detection for building protection at that location.

## Mounting Reference


**Electrical Box Requirements:** (boxes are by others)

**Without relay:** 4" octagonal or 4" square, 1-1/2" deep; single gang, 2" deep

**With relay:** 4" octagonal or 4" square, 1-1/2" deep, with 1-1/2" extension ring

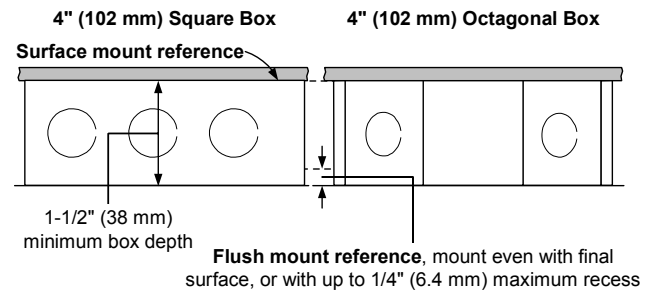


**2098-9737 Relay** (mounts in base electrical box or remotely)      **4098-9822 Relay** (mounts in base electrical box)

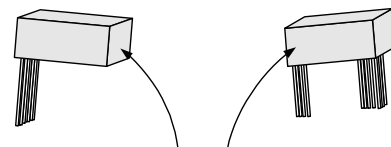

Relay Size: 2-1/2" X 1-1/2" X 1" (3.75 cubic inches)  
(64 mm X 38 mm X 25.4 mm)

**NOTE:** Review total wire count, wire size, and accessories being wired to determine required box volume.

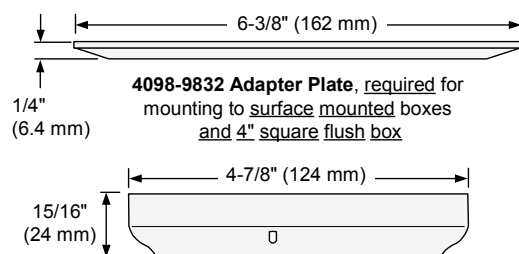

**TrueAlarm Bases**  
4098-9789, -9791, & -9792

## TrueAlarm Sensors

### Features

Sealed against rear air flow entry

Interchangeable mounting

EMI/RFI shielded electronics

Heat sensors:

- Selectable rate compensated, fixed temperature sensing with or without rate-of-rise operation
- Listed to UL Standard 521 for 60 ft (18.3 m) spacing for 135° F (57.2° C) alarm, and 40 ft (12.2 m) spacing for 155° F (68° C) alarm

Smoke Sensors:


- Photoelectric or ionization technology sensing
- 360° smoke entry for optimum response

### 4098-9733 Heat Sensor

TrueAlarm heat sensors are self-restoring and provide rate compensated, fixed temperature sensing, selectable with or without rate-of-rise temperature sensing. Due to its small thermal mass, the sensor accurately and quickly measures the local temperature for analysis at the fire alarm control panel.

Rate-of-rise temperature detection is selectable at the control panel for either 15° F (8.3° C) or 20° F (11.1° C) per minute. Fixed temperature sensing is independent of rate-of-rise sensing and programmable to operate at 135° F (57.2° C) or 155° F (68° C). In a slow developing fire, the temperature may not increase rapidly enough to operate the rate-of-rise feature. However, an alarm will be initiated when the temperature reaches its rated fixed temperature setting.

TrueAlarm heat sensors can be programmed as a utility device to monitor for temperature extremes in the range from 32° F to 155° F (0° C to 68° C). This feature can provide freeze warnings or alert to HVAC system problems. (Refer to specific panels for availability.)

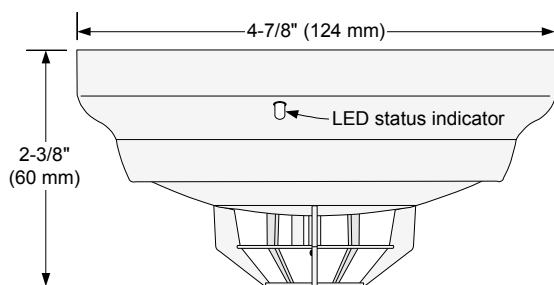


4098-9733 Heat Sensor with Base

**WARNING: In most fires, hazardous levels of smoke and toxic gas can build up before a heat detection device would initiate an alarm. In cases where Life Safety is a factor, the use of smoke detection is highly recommended.**

### 4098-9714 Photoelectric Sensor

TrueAlarm photoelectric sensors use a stable, pulsed infrared LED light source and a silicon photodiode receiver to provide consistent and accurate low power smoke sensing. Seven levels of sensitivity are available for each individual sensor, ranging from 0.2% to 3.7% per foot of smoke obscuration. Sensitivity is selected and monitored at the fire alarm control panel.

The sensor head design provides 360° smoke entry for optimum response to smoke from any direction. A built-in screen keeps insects from entering the smoke chamber. Due to its photoelectric operation, air velocity is not normally a factor, except for impact on area smoke flow.

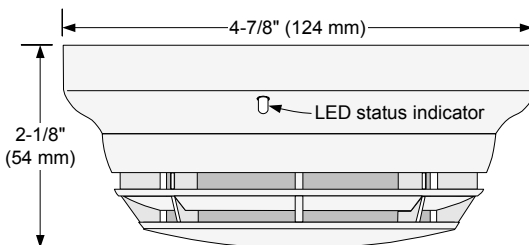


4098-9714 Photoelectric Sensor with Base

### 4098-9717 Ionization Sensor

TrueAlarm Ionization sensors use a single radioactive source with an outer sampling ionization chamber and an inner reference ionization chamber to provide stable operation under fluctuations in environmental conditions such as temperature and humidity. Smoke and invisible combustion gases can freely penetrate the outer chamber. With both chambers ionized by a small radioactive source [Am 241 (Americium)], a very small current flows in the circuit. The presence of particles of combustion will cause a change in the voltage ratio between chambers. This difference is measured by the electronics in the sensor base and digitally transmitted back to the control panel for processing.

Three levels of sensitivity are available for each ionization sensor: 0.5, 0.9, and 1.3% per foot of smoke obscuration.

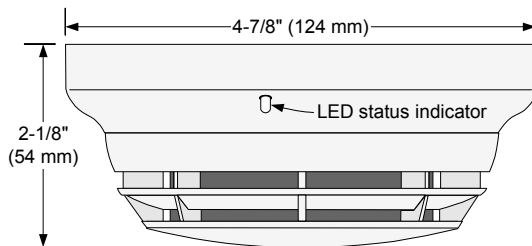

4098-9717 Ionization Sensor with Base

### Application Reference

Sensor locations should be determined only after careful consideration of the physical layout and contents of the area to be protected. Refer to NFPA 72, the *National Fire Alarm Code*. On smooth ceilings, smoke sensor spacing of 30 ft (9.1 m) may be used as a guide. For detailed application information, refer to *4098 Detectors, Sensors, and Bases Application Manual (574-709)*.

## TrueAlarm Analog Sensing Product Selection Chart

### TrueAlarm Sensor Bases

Model	Description	Compatibility	Mounting Requirements
4098-9792 (C)	Standard Sensor Base, no options	Sensors 4098-9714, -9733, & -9717	4" octagonal or 4" square box, 1-1/2" min. depth; or single gang box, 2" min. depth
4098-9789 (C)	Sensor Base with connections for Remote LED Alarm Indicator <b>or</b> Unsupervised Relay	Sensors 4098-9714, -9733, & -9717 2098-9808 remote LED alarm indicator <b>or</b> 4098-9822 relay	4" octagonal or 4" square box  <b>Note:</b> Box depth requirements depend on total wire count and wire size, refer to accessories list below for reference.
4098-9791 (C)	Sensor Base with connections for <b>Supervised Remote Relay and</b> connections for Remote Alarm Indicator <b>or</b> Unsupervised Relay	Sensors 4098-9714, -9733, & -9717 2098-9737 remote relay (supervised) 2098-9808 remote alarm indicator <b>or</b> 4098-9822 relay (unsupervised)	

### TrueAlarm Sensors

Model	Description	Compatibility	Mounting Requirements
4098-9714 (C)	Photoelectric Smoke Sensor	Bases 4098-9792, 4098-9789, and 4098-9791	Refer to base requirements
4098-9717 (C)	Ionization Smoke Sensor		
4098-9733 (C)	Heat Sensor		

### TrueAlarm Sensor/Base Accessories

Model	Description	Compatibility	Mounting Requirements
2098-9737	Supervised Relay, mounts remote or in base electrical box	For use with 4098-9791 base	<b>Remote Mounting</b> requires 4" octagonal or 4" square box, 1-1/2" minimum depth <b>Base Mounting</b> requires 4" octagonal box, 2-1/8" deep with 1-1/2" extension ring
2098-9808	Remote Red LED Alarm Indicator on single gang stainless steel plate	Bases 4098-9789 and 4098-9791	Single gang box, 1-1/2" minimum depth
4098-9822 (C)	Relay, tracks base LED status (unsupervised, mounts only in base electrical box)		4" octagonal box, 2-1/8" deep with 1-1/2" extension ring
4098-9832	Adapter Plate	Bases 4098-9792, -9789, & -9791	<b>Required</b> for surface or semi-flush mounted 4" square box and for surface mounted 4" octagonal box

Refer to publication *4098 Detectors, Sensors, and Bases Application Manual (574-709)* for additional information. ULC listed model numbers are designated by (C) and require a "C" suffix such as 4098-9794C.

## Specifications

### General Operating Specifications

Communications and Sensor Supervisory Power	MAPNET II or IDNet, auto-select, 24-40 VDC w/data, 400 $\mu$ A typical, 1 address per base
Communications Connections	Screw terminals for in/out wiring, 18 to 14 AWG
Remote LED Alarm Indicator Current	1 mA typical, no impact to alarm current
Remote LED Alarm Indicator and Relay Connections	Color coded wire leads, 18 AWG
UL Listed Temperature Range	32° to 100° F (0° to 38° C)
Operating Temperature Range	with 4098-9717 or 4098 -9733 32° to 122° F (0° to 50° C)
	with 4098-9714 15° to 122° F (-9° to 50° C)
Humidity Range	10 to 95% RH
Smoke Sensor Ambient Ratings	4098-9714, Photoelectric Sensor Air velocity is 0-2000 ft/min (0-610 m/min)
	4098-9717, Ionization Sensor Air velocity is 0-100 ft/min (0-30 m/min); Altitude is up to 8000 ft (2.4 km)
Housing Color	Frost White
<b>4098-9791 Base With Supervised Remote Relay 2098-9737</b> (see page 2 for contact ratings)	
Externally Supplied Relay Coil Voltage	18-32 VDC (nominal 24 VDC)
Supervisory Current	270 $\mu$ A, from 24 VDC supply
Alarm Current with 2098-9737 Relay	28 mA, from 24 VDC supply
<b>4098-9822 Unsupervised Relay, Requirements for Bases 4098-9789 and 4098-9791</b> (see page 2 for contact ratings)	
Externally Supplied Relay Coil Voltage	18-32 VDC (nominal 24 VDC)
Supervisory Current	Supplied from communications
Alarm Current	13 mA from separate 24 VDC supply

Tyco, Simplex, the Simplex logo, TrueAlarm, MAPNET II, and IDNet are trademarks of Tyco International Services AG or its affiliates in the U.S. and/or other countries. NFPA 72 is a registered trademark of the National Fire Protection Association (NFPA).



Westminster, Massachusetts 01441-0001 USA [www.simplexnet.com](http://www.simplexnet.com)

S4098-0019-8 12/01

© 2001 Simplex Time Recorder Co. DBA TEPG-US (a Tyco company). All rights reserved.

All specifications and other information shown were current as of document revision date and are subject to change without notice.